


# SHAD

## SUZUKI V-STROM 650 '11

SOVS62IF

**3P**  
SYSTEM

DESIGNED  
BARCELONA

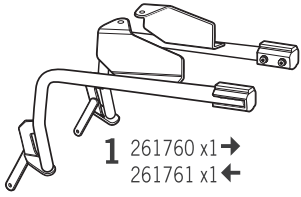


**1** 261760 x1 →  
261761 x1 ←



**2** 303020 x6  
Ø8



**3** 304028 x2  
M8 x 25 Din 7380

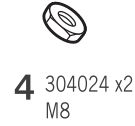

**4** 304024 x2  
M8



**5** 304272 x4  
M8 x 35 Din 7380

### ! WARNING!

**(GB)**

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**(E)**

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**(D)**

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**(I)**

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**(F)**

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

